



SPARE PARTS MANUAL

Ascot

FR168-4A



From Serial number A onwards

INDEX

P1 HANDLE BAR ASSEMBLY

P2 CHASSIS ASSEMBLY

P3 STEERING-DRIVE SYSTEM


P4 CHASSIS MOULDINGS

P5 REAR CHASSIS ASSEMBLY-DRIVE SYSTEM


P6 SEAT ASSEMBLY

P7 CONSOLE AND WIRING SYSTEM


HANDLE BAR ASSEMBLY

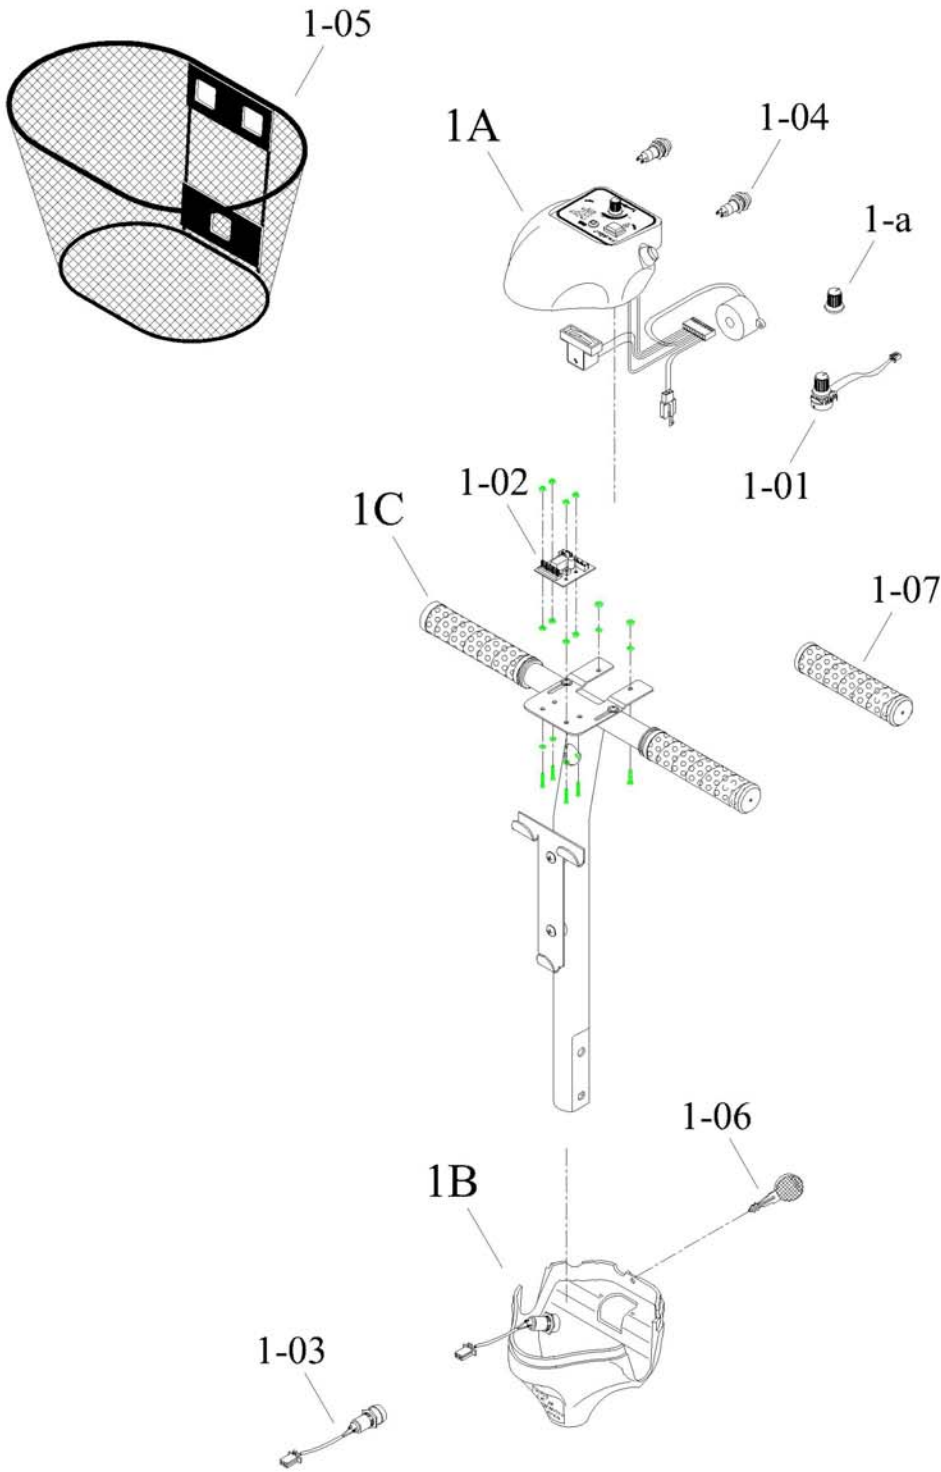


CHASSIS ASSEMBLY

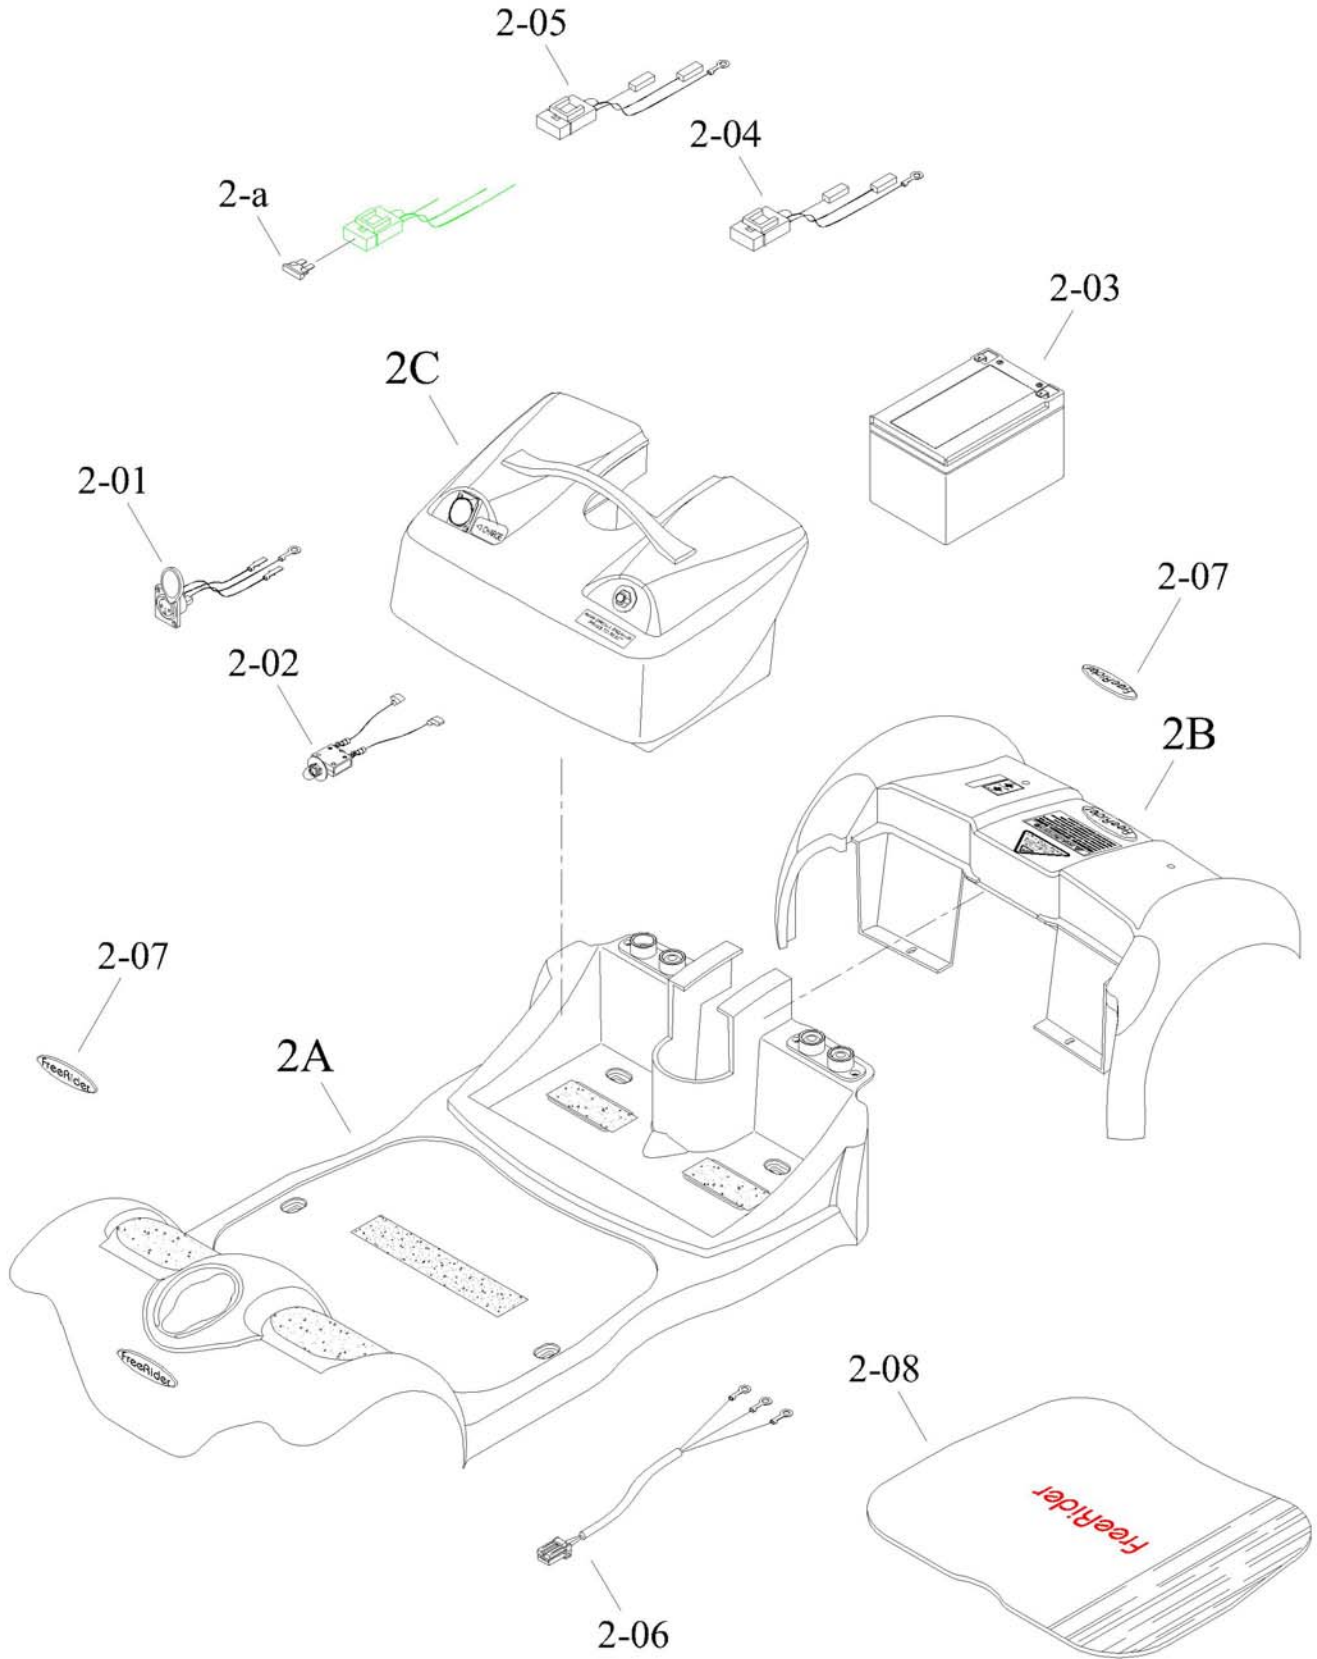


STEERING-DRIVE SYSTEM

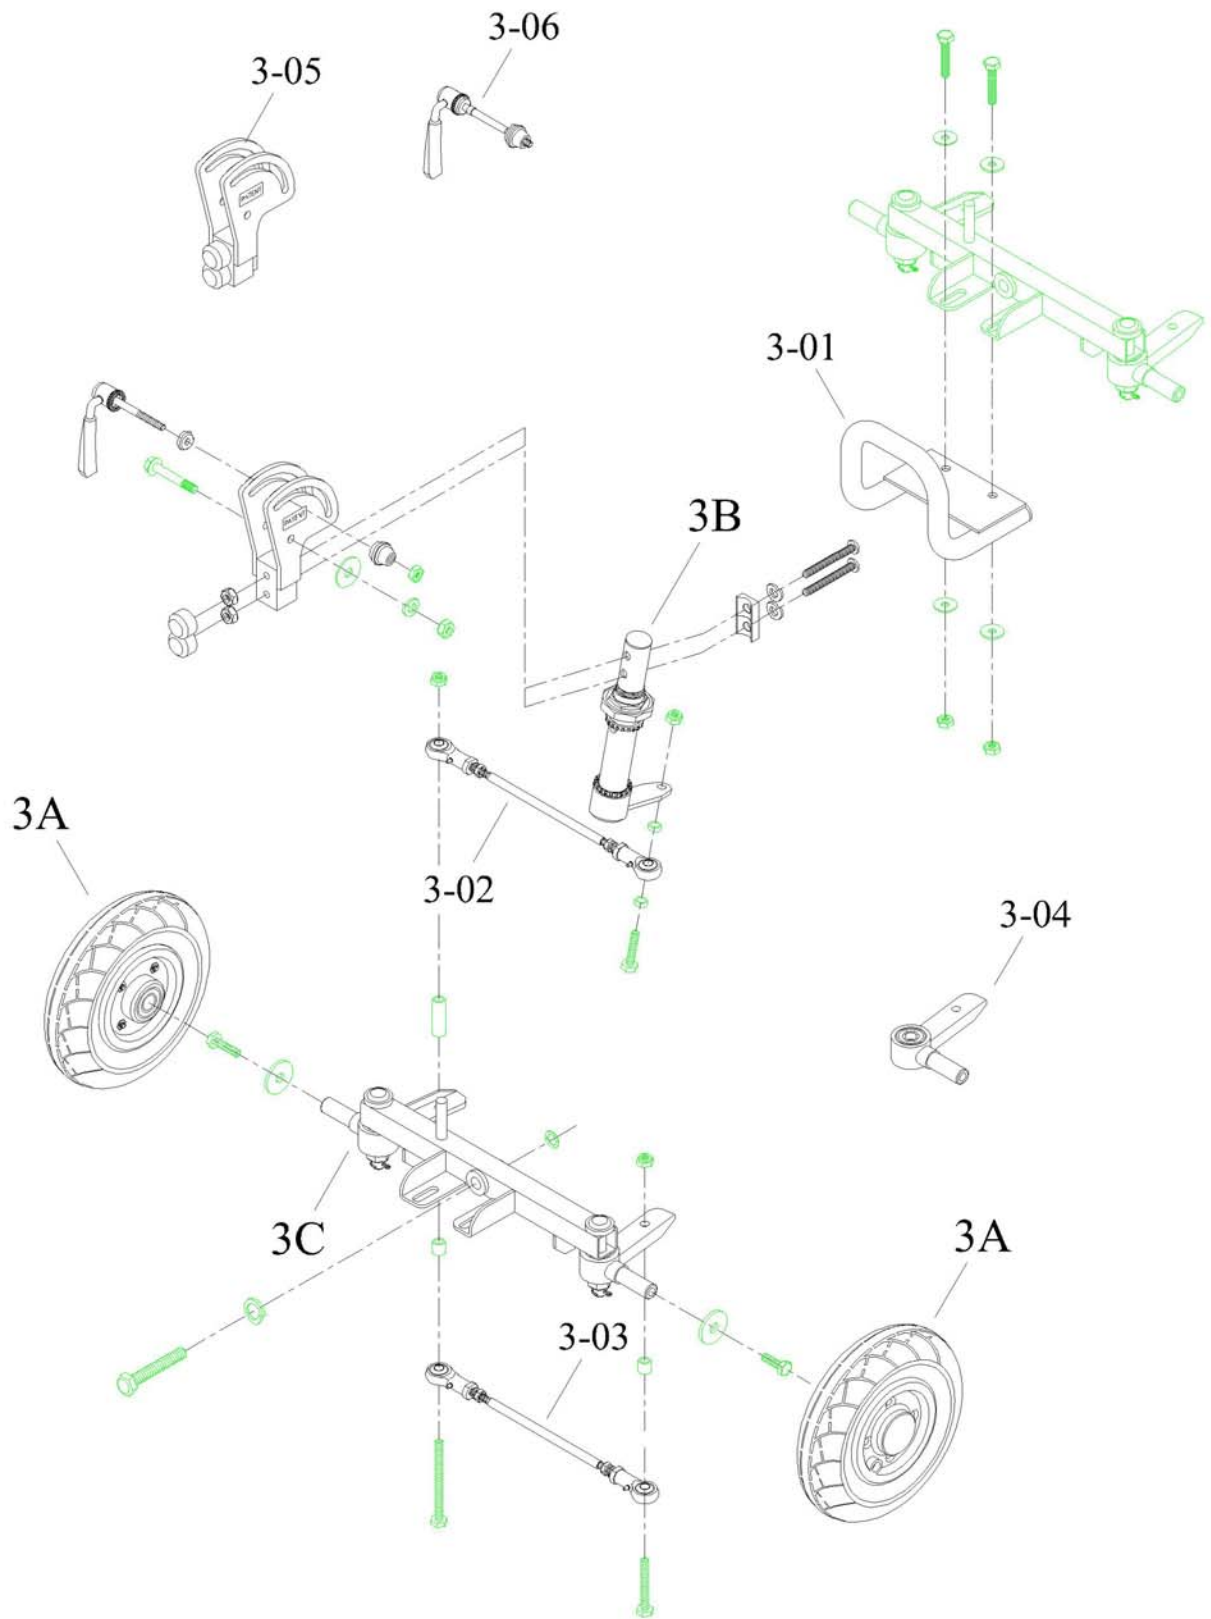

REAR CHASSIS ASSEMBLY-DRIVE SYSTEM

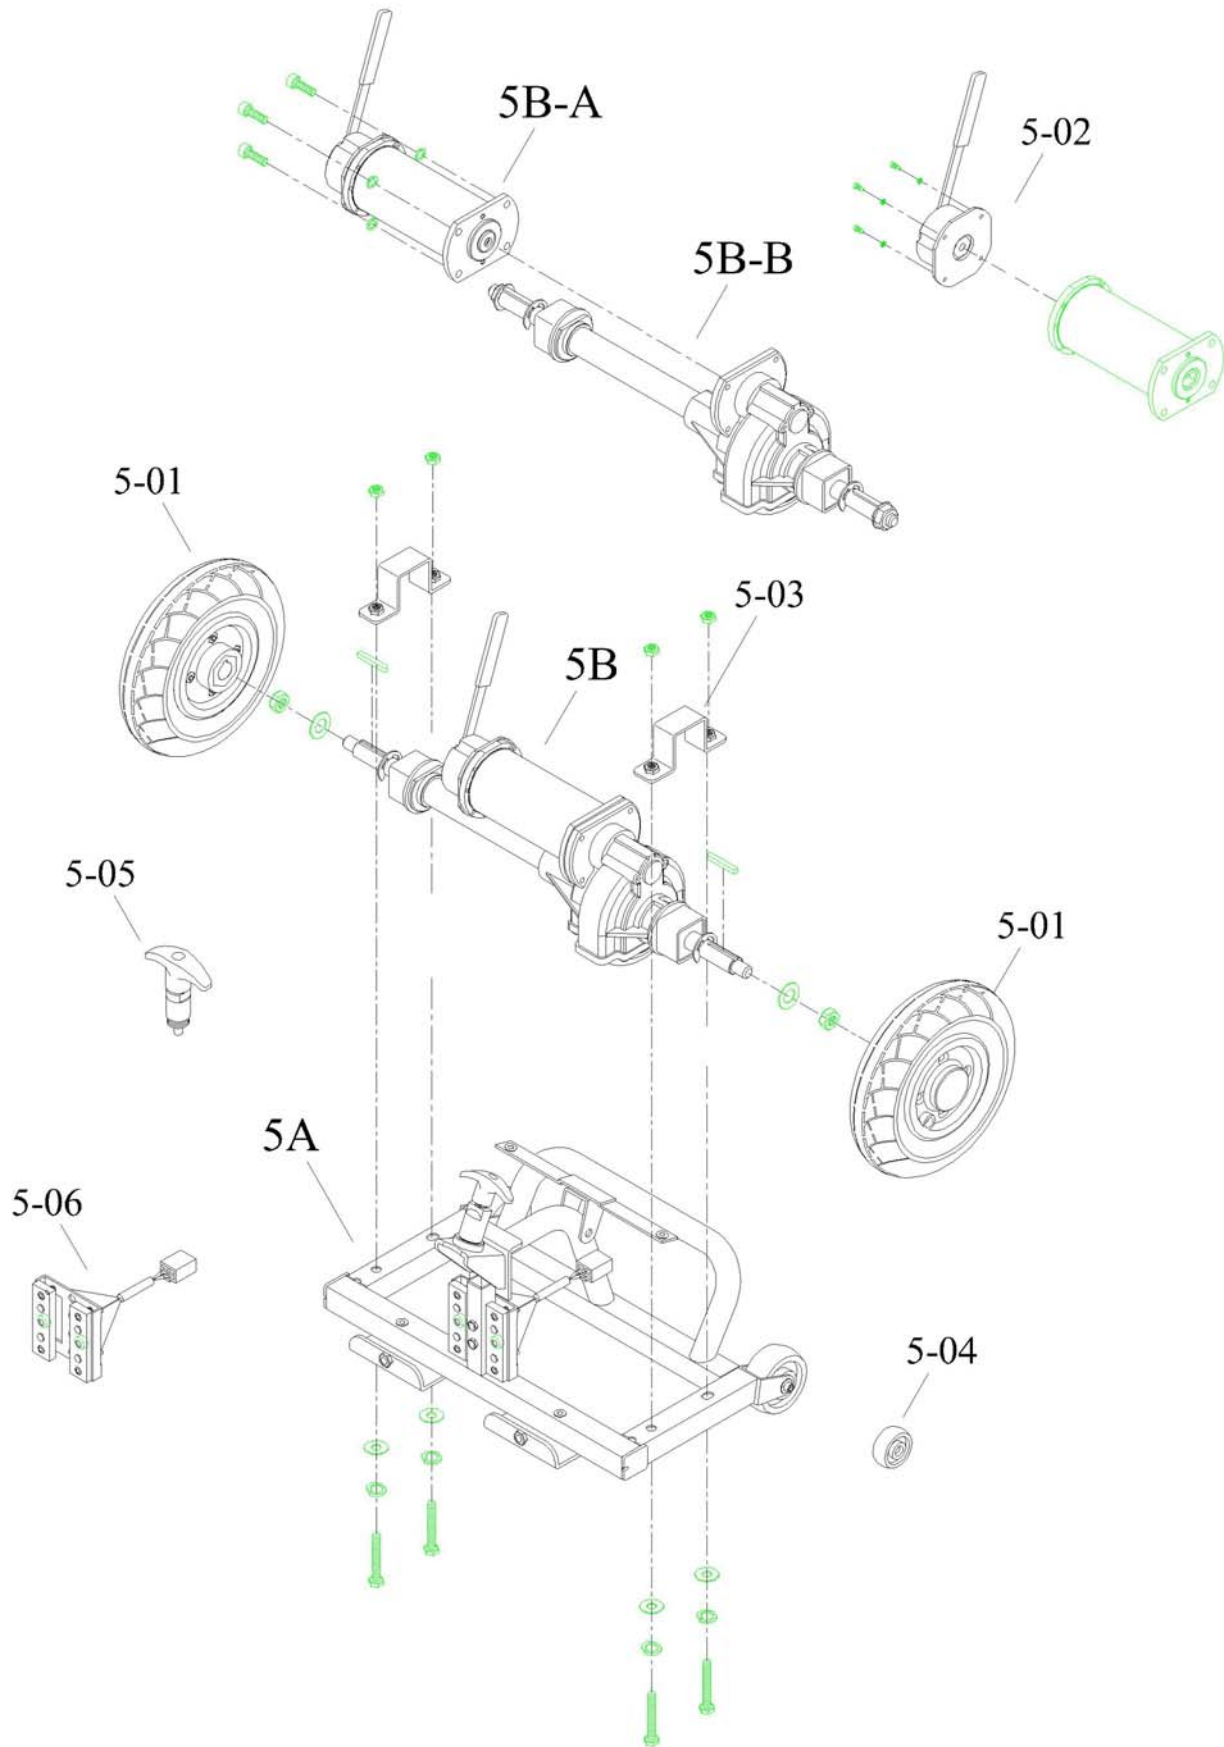

SEAT ASSEMBLY

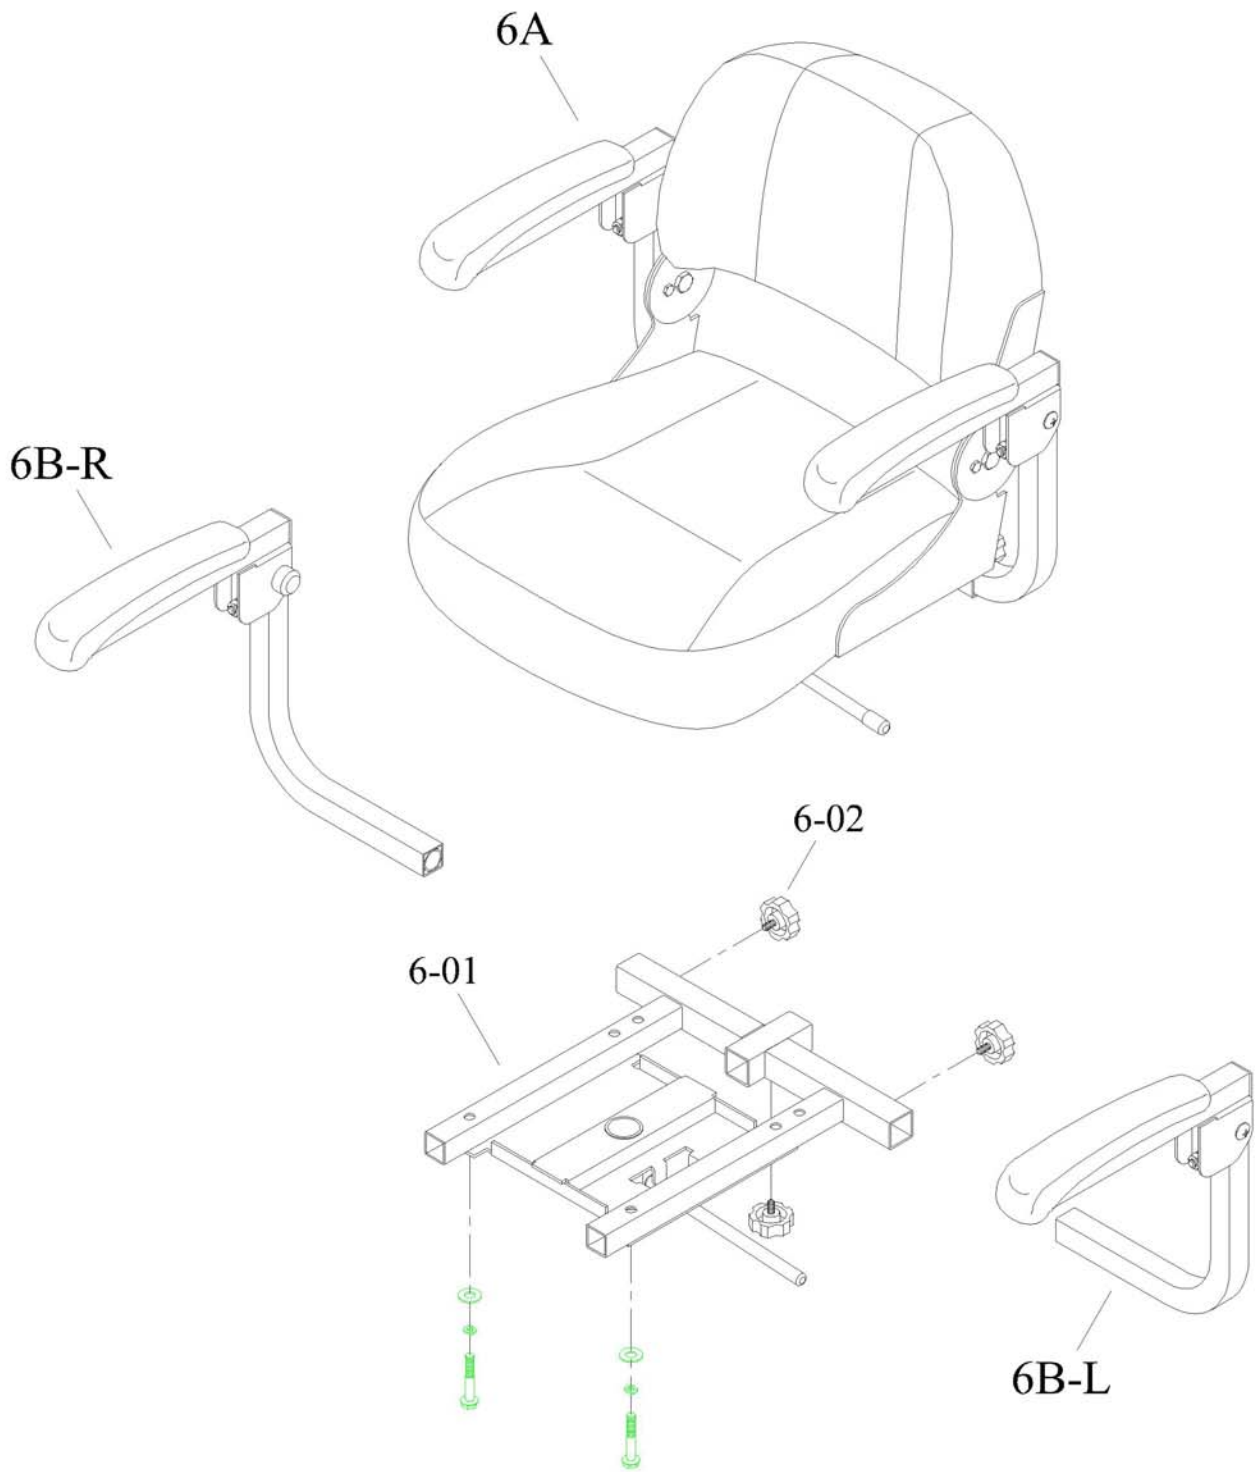

CONSOLE AND WIRING SYSTEM

